

SHADE SAIL INSTRUCTIONS





SHADE SAIL INSTRUCTIONS

Features

- 1 - 2 adjustment points at every connection
- Fits most Trampolines with Straight and Bent Pole enclosures (excluding Springfree)
- Will fit Vuly Trampolines with the use of the clamp insert
- Adjustable Height of shade Sail
- UV Light Filtering 80% protection

Shade Sail Parts

Part	6 Enclosure Poles	8 Enclosure Poles	12 Enclosure Poles
Poles Lengths	12	16	24
Pole Clamps	12	16	24
Elastic Bungee	3	4	6
C Bolts	6	8	12
Shade Sail	1	1	1
Anchor Kit	2	2	2

Notes and Warnings

- The Shade Sail is to be taken down in weather warnings such as cyclones, snow and high wind alerts. The poles can remain up.
- Anchor kits must be fitted to your trampoline, we supply in the package anchor kits for grassed areas. If your trampoline is on concrete or pavers you will need to secure down – in this case we recommend the use of sandbag anchor kits
- The Shade Sail is not to be grabbed onto or used to swing off
- The Shade Sail is not to be walked on

SHADE SAIL INSTRUCTIONS

STEP 1

- Place Poles together – they will be tough to join, which is intentional. Use a rubber mallet or hit onto grass (not concrete or pavers)



STEP 2

- Place C Bolts through Top poles – These are adjustable – we suggest you start with the thread even on both sides



STEP 3

- Attach the clamps to the Supplied Poles. At this stage have them approx 5 cms from the bottom of the 2 pole sections. Hand tighten the clamps so they do not slide around



STEP 4

- Now secure to your enclosure poles. Install at the height you want the shade sail to sit at and place the top clamp as close to the top of your net as possible (For bent pole enclosures place just before pole bends)

Press the clamp firmly against the enclosure pole whilst tightening the clamp with your other hand

Handy Hint – this may need further tightening after some use, please check on a regular basis



SHADE SAIL INSTRUCTIONS

- Warning: Do not grab and pull on the poles to hook the shade sail on as it may result in damaging the trampoline. If you are unable to reach use a ladder on the outside of the trampoline



STEP 5

- Loosen both adjusters enough on the pole clamps to slide the poles down so the C bolt sits just above the net.

STEP 6

- From the inside of the trampoline start to hook shade sail onto the C Bolts. Once you have done your first connection then do the opposite side to spread the tension evenly. On every second connection use the elastic bungy adjuster to assist with shock absorption.



SHADE SAIL INSTRUCTIONS

STEP 7

- Once shade sail is secured raise one pole at a time back to the desired height and tighten the bottom adjuster



STEP 8

- Shade sail can now be adjusted if any sagging is occurring by adjusting the C bolts



STEP 9

- If you don't have the trampoline secured to the ground use the anchor kits supplied or use sand bags if on hard surfaces



Notes and Warnings

- Ensure the clamps are tightly secured to the enclosure poles to ensure poles remain in position
- The Shade Sail is to be taken down in weather warnings such as cyclones, snow and high wind alerts. The poles can remain up.
- Anchor kits must be fitted to your trampoline, we supply in the package anchor kits for grassed areas. If your trampoline is on concrete or pavers you will need to secure down – in this case we recommend the use of sandbag anchor kits
- The Shade Sail is not to be gabbed onto or used to swing off
- The Shade Sail is not to be walked on



- Free Delivery Australia Wide*
- Round, Oval and Inground Trampolines
- Easy Returns*
- Long Warranties
- Largest Range of Parts in Oz
- High Quality - Built to Last
- Easy Claim Warranty Service
- Friendly Advice 7 Days a Week
- Trampolines and Replacement Parts
- Lay-by Available

*Please see www.oztrampolines.com.au for terms and conditions.



Call 1300 393 004

(7 days)

Email: sales@oztrampolines.com.au

Address: Factory 3/21 Leather St, Breakwater, VIC 3219

Hours: Monday-Friday 9am-5pm or by appointment